


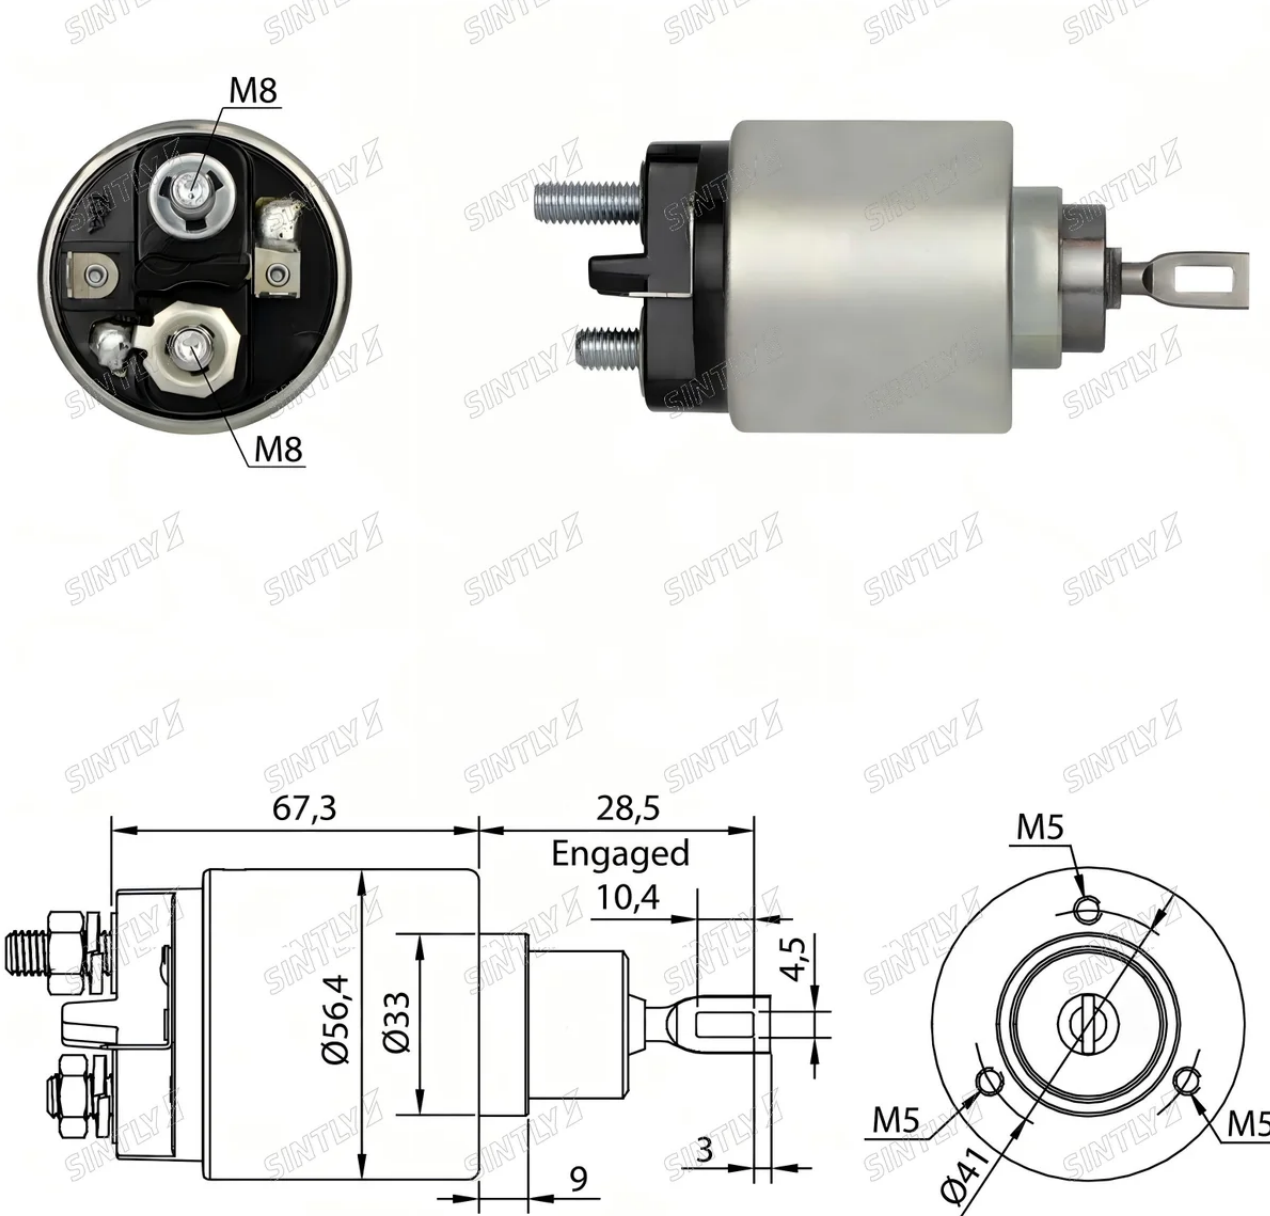

OE Numbers

BMW	1241.1.273.228
SAAB	75 27 856
VOLVO	13635461

Equivalent Code

BOSCH	0.331.303.008	0.331.303.033	0.331.303.074
	9.330.081.046	9.33A.081.046	0331303078
	0331303084	0331303240	0331303241
	0331303250	2339303240	2339303241
	2339303250	2339304249	
WAI	66-9146	66-9146-1	
AS-PL	UD15830SS	UD30538SS	SS0064
CARGO	131791	132262	
CQ	CQ2030027		
ELECTROLOG	SOL1020		
ERA	227070	227488	
POWERMAX	1013195		
UNIPOINT	SNLS-208		
WOODAUTO	SND1168		
ZM	ZM1573	ZM574	

Applications

ALFA ROMEO		
2300 TI with 102 alcohol	01/1983-01/1987	
CHEVROLET		
Chevette 1.0	01/1992-01/1993	Chevette 1.4 01/1974-01/1987
Chevette 1.6	01/1982-01/1987	Chevette 1.6 S 01/1990-01/1994
Chevette Hatch 1.4	01/1974-01/1987	Chevette Hatch 1.6 01/1982-01/1994
Chevy 500 1.6	01/1982-01/1987	Chevy 500 1.6 S 01/1987-01/1992
Marajó with 1.4 engine	01/1974-01/1987	
Marajó with 1.6 engine	01/1982-01/1987	
Marajó with 1.6 S engine	01/1987-01/1990	
FIAT		
147 Fiorino 1.3	01/1981-01/1988	147 Fiorino with 1.5 01/1988
147 Pick-up 1.1	01/1978-01/1981	147 Pick-up 1300 01/1978-01/1981
147 Pick-up City 1.3	01/1981-01/1988	Elba with 1.5 engine 01/1985
Prêmio with 1.5 engine	01/1985	
Tempra 2.0 MPI 16V with 159 B7.011	01/1996-01/1998	
Tempra 2.0 SPI 8V with 159 B1.011	01/1994-01/1998	
Tempra 2.0 SPI 8V with 159 B2.011	01/1994-01/1998	
Uno with 1.5 engine	01/1990	Uno with Fire engine 01/1990